

## SOUND

### SOUND SELECT



Sound Select												Virtual Technician				Brilliance (-10--+10)			Spatial Headphone Sound																																										
Classic E.Piano		Modern E.Piano		Jazz Organ		Church Organ		Harpischord		Vibraphone		String Ensemble		Slow Strings		Choir		New Age Pad		Atmosphere																																									
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8										
SK Concert Grand		EX Concert Grand		Upright Piano		Studio Grand		Mellow Grand 2		Mellow Grand 2		Modern Piano		Dual Mode On		Dual Balance Reset		Dual Balance I		Dual Balance +		Off		Room		Lounge		Small Hall		Concert Hall		Live Hall		Cathedral		Off		Noiseless		Deep Resonance		Light Resonance		Soft		Brilliant		Touch*		Normal		Open		Semi Open		Closed		Inner-ear		Canal	
Sound Select												Virtual Technician				Touch			Phones Type																																										
1 ~ 19												b1c ↔ SSS				tch ↔ nrrn			HPt ↔ nrrn																																										
Reverb												Virtual Technician				Touch			Phones Type																																										
REV ↔ ron												Snt ↔ CLn				tch ↔ nrrn			HPt ↔ nrrn																																										

\* Cycle through 4 setting types

## METRONOME

### METRO-NOME



Time Signature												Metronome Volume																																																																			
1/4		2/4		3/4		4/4		5/4		3/8		6/8		-		+																																																															
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8																												
Tempo -		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +		Tempo +																													
Metronome Tempo (3 digits)												46				56				66				80				96				120				160				192				208																																			
Metronome Tempo (Musical Term)												Grave				Largo				Lento				Larghetto				Adagio				Adagietto				Andante				Andantino				Maestoso				Moderato				Allegretto				Animato				Allegro				Vivace				Presto				Vivacissimo				Prestissimo			

## CONCERT MAGIC

### CONCERT MAGIC



Song Select																																																			
I'm A Little Teapot		Old MacDonald		Had A Farm		Row, Row, Row Your Boat		Deck The Halls		We Wish You A Merry Christmas		Joy To The World		Auld Lang Syne		Londonerry Air		When The Saints Go Marching In		Blue Danube Waltz		Funckill Funckilla		Chapaneas		Pomp And Circumstance		Funicelli Funicella		Waltz Of The Flowers		The Flowers		Maestro's Waltz		Moderato		Allegretto		Animato		Allegro		Vivace		Presto		Vivacissimo		Prestissimo	
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
1 Little Star		Mary Had A Little Lamb		London Bridge		Frete Jacques		Angels Sing		Hark The Herald		Jingle Bells		O Come All Ye Faithful		Silent Night		Battle Hymn Of The Republic		Yankee Doodle		Clementine		On Susanna		The Campion Faces		The Entertainer		Symphony No.94 (Haydn)		Andante from		Chair De Lune		Skater's Waltz		Gavotte (Gossec)		Bridal Chorus		When Irish Eyes Are Smiling		Wedding March		Santa Lucia		Romance De L'amour		My Wild Irish Rose	
Song Select												1 ~ 40																																							

\* If Vocal Assist is activated, the number of the selected song will be announced.

## SETTINGS

**Tuning** (427 Hz~453 Hz)  
440 Hz, -0.5 Hz, +0.5 Hz

**Transpose** (-6~+5)  
Off, On, -, +

**Transmit MIDI Program Change**  
Off, On

**MIDI Local Control**  
Off, On

**Multi-timbral Mode**  
Off, On

**Bluetooth**  
Off, On

**Sound Preview & Vocal Assist Volume**  
Off, 15 min., 60 min., 120 min.

**MIDI Channel**  
2, 4, 7, 9, 11, 14, 16

**Auto Power Off**  
Off, 15 min.

**Tuning Value (3 digits)**

**Program Number (3 digits)**

**MIDI Channel**

## LESSON

Selecting a Lesson book and song

**LESSON**

Book 1, Book 2, Book 3, Book 4, Book 5

A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2

**Song Number (3 digits)**

Beyer ..... 001 ~ 106  
Burgmüller .... 601 ~ 625  
Czerny ..... 201 ~ 230  
Alfred 1A ..... 801 ~ 841  
Alfred 1B ..... 901 ~ 938

Selecting the part to practice

**L** Press once: Left-hand only

**R** Press twice: Right-hand only

**L & R** Press 3 times: Both Left and Right hands

Listening to the song

CONCERT MAGIC LESSON  
LESSON  
RECORD

### STARTUP SETTINGS

REC  
SOUND SELECT  
SET

Press and hold the buttons for three seconds

### FACTORY RESET

METRO-NOME SOUND SELECT  
1 Hold both buttons

2 Turn the power on

Fct ↵ rps  
End

## RECORDER

Record song 001 ~ 003

REC

Song Selection  
Song 1, Song 2, Song 3

PLAY/STOP

1 Enter recording mode  
2 Select a song memory  
3 Start recording

Play song 001 ~ 003

PLAY/STOP

Song Selection  
Song 1, Song 2, Song 3

Erase all songs

PLAY/STOP REC  
1 Hold both buttons

2 Turn the power on

